

Box Contents

Contenu de la boîte

Lieferumfang

Contenido de la caja

Contenuti della confezione












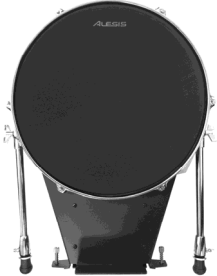


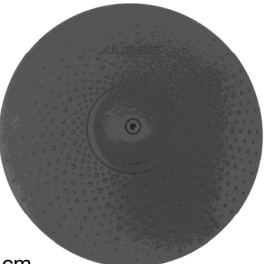
If you bought the **Strike Pro Kit**, please refer to the box contents sheet in the Strike Pro Kit Expansion Pack instead.

Si compró el **Strike Pro Kit**, consulte en cambio la hoja de contenidos de la caja del Strike Pro Kit Expansion Pack.

Si vous avez acheté le **Strike Pro Kit**, veuillez consulter la feuille du contenu de la boîte du Strike Pro Kit Expansion Pack.

In caso di acquisto dello **Strike Pro Kit**, fare invece riferimento al foglietto relativo ai contenuti della confezione dello Strike Pro Kit Expansion Pack.

Wenn Sie das **Strike Pro Kit** gekauft haben, lesen Sie stattdessen bitte den Lieferumfang für das Strike Pro Kit Expansion Pack.

<p>B (2)</p>  <p>24" / 60 cm</p>	<p>C</p>  <p>36" / 91 cm</p>	<p>A</p> 
<p>E (2)</p> 	<p>F (4)</p> 	<p>D (2)</p> 
<p>H (2)</p> 	<p>I</p>  <p>Tom 1 8" / 20 cm</p>	<p>J</p>  <p>Tom 2 10" / 25 cm</p>
<p>K</p>  <p>Tom 3 12" / 30 cm</p>	<p>L</p>  <p>Snare 14" / 36 cm</p>	<p>M</p>  <p>Kick 14" / 36 cm</p>
<p>N</p>  <p>Hi-Hat (Top) 12" / 30 cm</p>	<p>O</p>  <p>Crash 14" / 36 cm</p>	<p>P</p>  <p>Ride 16" / 41 cm</p>















Box Contents

Contenido de la caja

Contenu de la boîte

Contenuti della confezione

Lieferumfang

<p>Q</p> 	<p>R</p> 	<p>S</p> 
<p>T</p> 	<p>U</p>  <p>Hi-Hat (Bottom) 12" / 30 cm</p>	<p>V</p> 
<p>W</p> 	<p>X (4)</p> 	<p>Y</p> 
<p>Z</p> 	<p>AA</p> 	<p>BB</p> 
<p>CC</p> 	<p>DD</p> 	<p>EE (2)</p> 